



Description

The Sigma A-XT Extinguishant abort switch connects to the Abort terminals of the Sigma A-XT releasing panel. Any number of Sigma A-Si Abort Switches may be connected to the circuit.

Features

Two-wire serial connection

Up to seven per system

Volt-Free relay outputs for fire and releasing system status

Relay Operated LED indicators

UL864 and FM Listed

Product Layout

